

**DENON** *PROFESSIONAL*

**COMPACT DISC PLAYER**

**DN-C110**

---

**Owner's Manual**

**Bedienungsanleitung**

**Manuel de l'Utilisateur**


**Manuale delle istruzioni**

**Manual del usuario**


**Gebruiksaanwijzing**

**Bruksanvisning**

☐ SAFETY PRECAUTIONS



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN




**CAUTION:**  
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.


The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:**  
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

☐ Laser Class  
**CLASS 1 LASER PRODUCT**  
**LUOKAN 1 LASERLAITE**  
**KLASS 1 LASERAPPARAT**

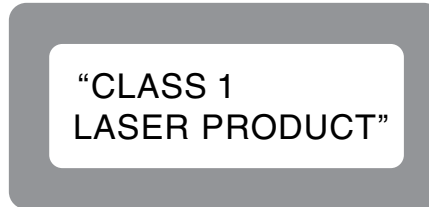

- ADVARSEL:** USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
- VAROITUS:** LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTAA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄMTTÖMÄLLE LASERSÄTEILYLLE.
- VARNING:** OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.


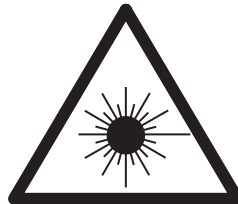

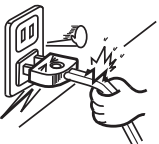
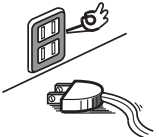





ATTENZIONE: QUESTO APPARECCHIO E' DOTATO DI DISPOSITIVO OTTICO CON RAGGIO LASER. L'USO IMPROPRIO DELL'APPARECCHIO PUO' CAUSARE PERICOLOSE ESPOSIZIONI A RADIAZIONI!

**CAUTION:**  
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.  
THIS PRODUCT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

- **DECLARATION OF CONFORMITY**  
We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards: EN60065, EN55013, EN55020, EN61000-3-2 and EN61000-3-3. Following the provisions of 2006/95/EC and 2004/108/EC Directive.
  - **ÜBEREINSTIMMUNGSERKLÄRUNG**  
Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht: EN60065, EN55013, EN55020, EN61000-3-2 und EN61000-3-3. Entspricht den Verordnungen der Direktive 2006/95/EC und 2004/108/EC.
  - **DECLARATION DE CONFORMITE**  
Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants: EN60065, EN55013, EN55020, EN61000-3-2 et EN61000-3-3. D'après les dispositions de la Directive 2006/95/EC et 2004/108/EC.
  - **DICHIARAZIONE DI CONFORMITÀ**  
Dichiaro con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative: EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3. In conformità con le condizioni delle direttive 2006/95/EC e 2004/108/EC. QUESTO PRODOTTO E' CONFORME AL D.M. 28/08/95 N. 548
  - **DECLARACIÓN DE CONFORMIDAD**  
Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares: EN60065, EN55013, EN55020, EN61000-3-2 y EN61000-3-3. Siguiendo las provisiones de las Directivas 2006/95/EC y 2004/108/EC.
  - **EENVORMIGHEIDSVERKLARING**  
Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit product, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen: EN60065, EN55013, EN55020, EN61000-3-2 en EN61000-3-3. Volgens de bepalingen van de Richtlijnen 2006/95/EC en 2004/108/EC.
  - **ÖVERENSSTÄMMELSESINTYG**  
Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder: EN60065, EN55013, EN55020, EN61000-3-2 och EN61000-3-3. Enligt stadgarna i direktiv 2006/95/EC och 2004/108/EC.
- DMi D&M Installation Europe  
Kingsbridge House, Padbury Oaks Longford  
Middlesex UB7 0EH UK

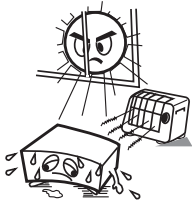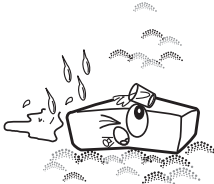NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA ANGÅENDE ANVÄNDNINGEN

 <ul style="list-style-type: none"> <li>• Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack.</li> <li>• Vermeiden Sie hohe Temperaturen. Beachten Sie, dass eine ausreichende Belüftung gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird.</li> <li>• Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.</li> <li>• Evitate di esporre l'unità a temperature elevate. Assicuratevi che vi sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio.</li> <li>• Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola.</li> <li>• Vermijd hoge temperaturen. Zorg er bij installatie in een audiorack voor, dat de door het toestel geproduceerde warmte goed kan worden afgevoerd.</li> <li>• Undvik höga temperaturer. Se till att det finns möjlighet till god värmeavledning vid montering i ett rack.</li> </ul>	 <ul style="list-style-type: none"> <li>• Keep the unit free from moisture, water, and dust.</li> <li>• Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.</li> <li>• Protéger l'appareil contre l'humidité, l'eau et la poussière.</li> <li>• Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere.</li> <li>• Mantenga el equipo libre de humedad, agua y polvo.</li> <li>• Laat geen vochtigheid, water of stof in het apparaat binnendringen.</li> <li>• Utsätt inte apparaten för fukt, vatten och damm.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let foreign objects into the unit.</li> <li>• Lassen Sie keine fremden Gegenstände in das Gerät kommen.</li> <li>• Ne pas laisser des objets étrangers dans l'appareil.</li> <li>• Non inserire corpi estranei all'interno dell'unità.</li> <li>• No deje objetos extraños dentro del equipo.</li> <li>• Laat geen vreemde voorwerpen in dit apparaat vallen.</li> <li>• Se till att främmande föremål inte tränger in i apparaten.</li> </ul>	<p><b>CAUTION:</b></p> <ul style="list-style-type: none"> <li>• The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.</li> <li>• No naked flame sources, such as lighted candles, should be placed on the unit.</li> <li>• Observe and follow local regulations regarding battery disposal.</li> <li>• Do not expose the unit to dripping or splashing fluids.</li> <li>• Do not place objects filled with liquids, such as vases, on the unit.</li> </ul> <p><b>ACHTUNG:</b></p> <ul style="list-style-type: none"> <li>• Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o. Ä. behindert werden.</li> <li>• Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden.</li> <li>• Bitte beachten Sie bei der Entsorgung der Batterien die örtlich geltenden Umweltbestimmungen.</li> <li>• Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden.</li> <li>• Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden.</li> </ul> <p><b>ATTENTION:</b></p> <ul style="list-style-type: none"> <li>• La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc.</li> <li>• Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil.</li> <li>• Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées.</li> <li>• L'appareil ne doit pas être exposé à l'eau ou à l'humidité.</li> <li>• Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil.</li> </ul> <p><b>ATTENZIONE:</b></p> <ul style="list-style-type: none"> <li>• Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via.</li> <li>• Non posizionate sull'unità fiamme libere, come ad esempio candele accese.</li> <li>• Prestate attenzione agli aspetti legati alla tutela dell'ambiente nello smaltimento delle batterie.</li> <li>• L'apparecchiatura non deve essere esposta a gocciolii o spruzzi.</li> <li>• Non posizionate sull'unità alcun oggetto contenente liquidi, come ad esempio i vasi.</li> </ul>
 <ul style="list-style-type: none"> <li>• Handle the power cord carefully. Hold the plug when unplugging the cord.</li> <li>• Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen.</li> <li>• Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.</li> <li>• Manneggiare il cavo di alimentazione con attenzione. Tenete ferma la spina quando scollegate il cavo dalla presa.</li> <li>• Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía.</li> <li>• Hanteer het netsnoer voorzichtig. Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld.</li> <li>• Hantera nätkablen varsamt. Håll i kabeln när den kopplas från el-uttaget.</li> </ul>	 <ul style="list-style-type: none"> <li>• Unplug the power cord when not using the unit for long periods of time.</li> <li>• Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker.</li> <li>• Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.</li> <li>• Scollegate il cavo di alimentazione quando prevedete di non utilizzare l'unità per un lungo periodo di tempo.</li> <li>• Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo.</li> <li>• Neem altijd het netsnoer uit het stopkontakt wanneer het apparaat gedurende een lange periode niet wordt gebruikt.</li> <li>• Koppla loss nätkablen om apparaten inte kommer att användas i lång tid.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let insecticides, benzene, and thinner come in contact with the unit.</li> <li>• Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen.</li> <li>• Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.</li> <li>• Assicuratevi che l'unità non entri in contatto con insetticidi, benzolo o solventi.</li> <li>• No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.</li> <li>• Voorkom dat insecticiden, benzeen of verververdunner met dit toestel in contact komen.</li> <li>• Se till att inte insektsmedel på spraybruk, bensen och thinner kommer i kontakt med apparatens hölje.</li> </ul>	<p><b>PRECAUCIÓN:</b></p> <ul style="list-style-type: none"> <li>• La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles, cortinas, etc.</li> <li>• No debe colocarse sobre el aparato ninguna fuente inflamable sin protección, como velas encendidas.</li> <li>• A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente.</li> <li>• No exponer el aparato al goteo o salpicaduras cuando se utilice.</li> <li>• No colocar sobre el aparato objetos llenos de líquido, como jarros.</li> </ul> <p><b>WAARSCHUWING:</b></p> <ul style="list-style-type: none"> <li>• De ventilatie mag niet worden belemmerd door de ventilatieopeningen af te dekken met bijvoorbeeld kranten, een tafelkleed, gordijnen, enz.</li> <li>• Plaats geen open vlammen, bijvoorbeeld een brandende kaars, op het apparaat.</li> <li>• Houd u steeds aan de milieuvoorschriften wanneer u gebruikte batterijen wegdoet.</li> <li>• Stel het apparaat niet bloot aan druppels of spatten.</li> <li>• Plaats geen voorwerpen gevuld met water, bijvoorbeeld een vaas, op het apparaat.</li> </ul> <p><b>OBSERVERA:</b></p> <ul style="list-style-type: none"> <li>• Ventilationen bör inte förhindras genom att täcka för ventilationsöppningarna med föremål såsom tidningar, bordsdukar, gardiner osv.</li> <li>• Inga blottade brandkällor, såsom tända ljus, får placeras på apparaten.</li> <li>• Tänk på miljöaspekterna när du bortskaffar batterier.</li> <li>• Apparaten får inte utsättas för vätska.</li> <li>• Placera inte föremål fyllda med vätska, t.ex. vaser, på apparaten.</li> </ul>
	 <p>* (For apparatuses with ventilation holes)</p> <ul style="list-style-type: none"> <li>• Do not obstruct the ventilation holes.</li> <li>• Decken Sie den Lüftungsbereich nicht ab.</li> <li>• Ne pas obstruer les trous d'aération.</li> <li>• Non coprite i fori di ventilazione.</li> <li>• No obstruya los orificios de ventilación.</li> <li>• De ventilatieopeningen mogen niet worden geblokkeerd.</li> <li>• Täpp inte till ventilationsöppningarna.</li> </ul>	 <ul style="list-style-type: none"> <li>• Never disassemble or modify the unit in any way.</li> <li>• Versuchen Sie niemals das Gerät auseinander zu nehmen oder zu verändern.</li> <li>• Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.</li> <li>• Non smontare né modificare l'unità in alcun modo.</li> <li>• Nunca desarme o modifique el equipo de ninguna manera.</li> <li>• Dit toestel mag niet gedemonteerd of aangepast worden.</li> <li>• Ta inte isär apparaten och försök inte bygga om den.</li> </ul>	

**CAUTION:**

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.

The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

**VORSICHT:**

Um dieses Gerät vollständig von der Stromversorgung abzutrennen, ziehen Sie bitte den Stecker aus der Wandsteckdose.

Der Netzstecker wird verwendet, um die Stromversorgung zum Gerät völlig zu unterbrechen; er muss für den Benutzer gut und einfach zu erreichen sein.

**PRECAUTION:**

Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale.

La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

**ATTENZIONE:**

Per scollegare completamente questo prodotto dalla rete di alimentazione elettrica, scollegare la spina dalla relativa presa a muro.

La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'unità e deve essere facilmente accessibile all'utente.

**PRECAUCIÓN:**

Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared.

El enchufe de la alimentación eléctrica se utiliza para interrumpir por completo el suministro de alimentación eléctrica a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso.

**WAARSCHUWING:**

Om de voeding van dit product volledig te onderbreken moet de stekker uit het stopcontact worden getrokken.

De netstekker wordt gebruikt om de stroomtoevoer naar het toestel volledig te onderbreken en moet voor de gebruiker gemakkelijk bereikbaar zijn.

**FÖRSIKTIHETSMÅTT:**

Koppla loss stickproppen från eluttaget för att helt skilja produkten från nätet.

Stickproppen används för att helt bryta strömförsörjningen till apparaten, och den måste vara lättillgänglig för användaren.

**A NOTE ABOUT RECYCLING:**

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.

When discarding the unit, comply with local rules or regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.

This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.

**HINWEIS ZUM RECYCLING:**

Das Verpackungsmaterial dieses Produktes ist zum Recyceln geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling-Vorschriften.

Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen.

Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden; bitte entsorgen Sie die Batterien gemäß der örtlichen Vorschriften.

Dieses Produkt und das im Lieferumfang enthaltene Zubehör (mit Ausnahme der Batterien!) entsprechen der WEEE-Direktive.

**UNE REMARQUE CONCERNANT LE RECYCLAGE:**

Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer des matériaux conformément aux lois sur le recyclage en vigueur.

Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations en vigueur.

Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles.

Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE.

**NOTA RELATIVA AL RICICLAGGIO:**

I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio.

Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore.

Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici.

Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

**ACERCA DEL RECICLAJE:**

Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad.

Cuando se deshaga de la unidad, cumpla con las reglas o reglamentos locales.

Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos.

Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas.

**EEN AANTEKENING MET BETREKKING TOT DE RECYCLING:**

Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden. Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften.

Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op.

Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd.

Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing.

**OBSERVERA ANGÅENDE ÅTERVINNING:**

Produktens emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser.

När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.

Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall. Denna apparat och de tillbehör som levereras med den uppfyller gällande WEEE-direktiv, med undantag av batterierna.



Pb

## Getting Started

<b>Main Features</b> .....	1
<b>Accessories</b> .....	2
<b>Cautions on Handling</b> .....	2
<b>Discs</b> .....	2
Discs Usable on the DN-C110 .....	2
Holding Discs .....	2
Loading Discs .....	2
Cautions on Loading Discs .....	2
Cautions on Handling .....	3
Cautions on Storing Discs .....	3
Cleaning Discs .....	3
<b>About the Remote Control Unit</b> .....	3
Inserting the Batteries .....	3
Operating Range of the Remote Control Unit .....	3
<b>Part Names and Functions</b> .....	4
Front Panel .....	4
Rear Panel .....	4
Display .....	4
Remote Control Unit .....	5

## Connections

<b>Preparations</b> .....	5
Cables Used for Connections .....	5
<b>Analog Connections</b> .....	6
<b>Digital Connections</b> .....	6
<b>Connecting the Power Cord</b> .....	6
<b>Once Connections are Completed</b> .....	6

## Playback

<b>Preparations</b> .....	7
Turning the Power On .....	7
Loading Discs .....	7
<b>Operations Possible During Playback</b> .....	7
Switching the Display's Brightness .....	7
Listening with Headphones .....	7
<b>CD Playback</b> .....	8
Playing CDs .....	8
Switching the Display .....	8
Playing Repeatedly <Repeat Playback> .....	8
Repeated playback of parts you want to play <A-B repeat play> .....	8
Playing Random Order <Random Playback> .....	9
Playing Tracks in the Desired Order <Program playback> .....	9
<b>Playback of MP3 and WMA Files</b> .....	9
About the MP3 and WMA Formats That Can be Played .....	9
Playing MP3 and WMA Files .....	10
<b>Using the Timer Play Function</b> .....	11

## Troubleshooting ..... 11

## Specifications ..... 12

## Index ..... 12

# Getting Started

Thank you for purchasing this DENON PROFESSIONAL CD Player. To ensure proper operation, please read this owner's manual carefully before using the product.  
After reading them, be sure to keep them for future reference.


## Main Features

- 1. Compatible with MP3/WMA files**  
Handles playback of MP3/WMA files written to CD-R/CD-RW discs.  
※ Playback may not be possible in parts if the disc's write condition is poor.
- 2. Uses a dot matrix display with 2 display lines**  
Use of a 16-character, 2-line display makes it easy to select MP3/WMA tracks.
- 3. High-precision 24-bit D/A converter installed**  
Advanced segment type 24-bit D/A converter installed, which is inherited from upscale models.
- 4. Construction that eliminates adverse effects on audio signals**  
To obtain stable CD drive performance, the CD drive mechanism is mounted on a special chassis that features a centrally located, high-rigidity construction. Power, audio and servo circuits boards are separated, and boards are constructed to eliminate interference between circuits as part of the high-grade model sound quality design know-how invested in the DN-C110.

## Accessories

Check that the following parts are supplied with the product.

- ① Owner's manual..... 1
- ② Service station list..... 1
- ③ Remote control unit (RC-1132) ..... 1
- ④ R03/AAA batteries..... 2
- ⑤ Audio cable (Cord length: Approx. 1.0 m) ..... 1

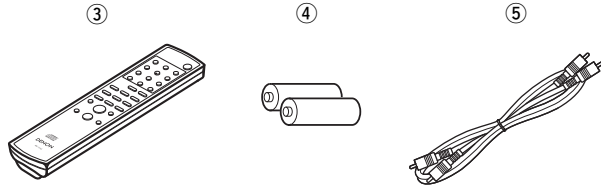

## Cautions on Handling

### • Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

• When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

### • Sufficiently ventilate the place of installation

If the unit is left in a room full of the smoke from cigarettes, etc., for long periods of time, the surface of the optical pickup could get dirty, in which case it will not be able to read the signals properly.

### • About condensation

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

### • Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.

### • Moving the unit

Turn off the power and unplug the power cord from the power outlet.

Next, disconnect the connection cables to other system units before moving the unit.

• Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

## Discs

### Discs Usable on the DN-C110

#### ① Music CDs

Discs marked with the logotype below can be played in this unit.



#### ② CD-R/CD-RW

#### NOTE

• Discs with special shapes (heart-shaped discs, octagonal discs, etc.) cannot be played. Do not attempt to play them, as doing so can damage the product.



• Some discs and some recording formats may not be playable.

• Non-finalized discs cannot be played.

#### ※ What is finalization?

Finalization is the process that makes recorded CD-R/CD-RW discs playable on compatible players.



## Holding Discs



Do not touch the signal surface.

## Loading Discs

- Set the disc with the labeled side facing up.
- Make sure the disc tray is fully open when inserting the disc.
- Place the discs flatly, 12 cm discs in the outer tray guide (Figure 1), 8 cm discs in the inner tray guide (Figure 2).

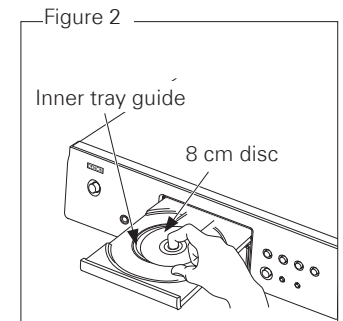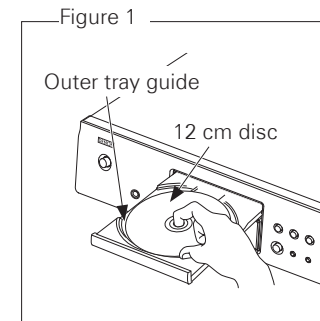

- Place 8 cm discs in the inner tray guide without using an adapter.



- "00 Tr 00 : 00" is displayed if a disc that cannot be played is loaded.
- "NO DISC" is displayed if the disc is loaded upside-down or if no disc is loaded.

#### NOTE

Do not push the disc tray in by hand when the power is turned off. Doing so could damage the set.

## Cautions on Loading Discs

- Only load one disc at a time. Loading two or more discs can damage the unit or scratch the discs.
- Do not use cracked or warped discs or discs that have been repaired with adhesive, etc.
- Do not use discs on which the sticky part of cellophane tape or labels is exposed or on which there are traces of where labels have been removed. Such discs can get caught inside the player and damage it.



### Cautions on Handling


- Do not get fingerprints, oil or dirt on discs.
- Take special care not to scratch discs when removing them from their cases.
- Do not bend or heat discs.
- Do not enlarge the hole at the center.
- Do not write on the labeled (printed) surface with ball-point pens, pencils, etc., or stick new labels on discs.
- Water droplets may form on discs if they are moved suddenly from a cold place (outdoors for example) to a warm place, but do not try to dry them off using a hairdryer, etc.

### Cautions on Storing Discs


- Be sure to remove discs after using them.
- Be sure to store discs in their cases to protect them from dust, scratches, warping, etc.
- Do not store discs in the following places:
  1. Places exposed to direct sunlight for long periods of time
  2. Dusty or humid places
  3. Places exposed to heat from heating appliances, etc.

### Cleaning Discs

- If there are fingerprints or dirt on discs, wipe them off before using the disc. Fingerprints and dirt can impair sound quality and cause interruptions in playback.
- Use a commercially available disc cleaning set or a soft cloth to clean discs.

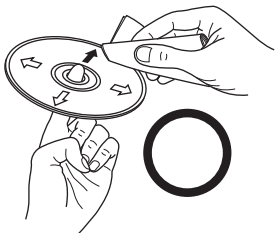

Gently wipe the disc from the inside towards the outside.

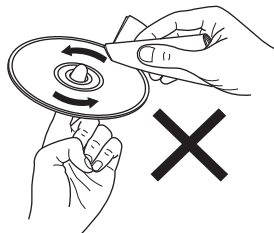

Do not wipe with a circular motion.



#### NOTE

Do not use record spray, antistatic agents, or benzene, thinner or other solvents.

## About the Remote Control Unit

### Inserting the Batteries

- ① Remove the remote control unit's rear cover.
- ② Set two R03/AAA batteries in the battery compartment in the indicated direction.
- ③ Put the rear cover back on.

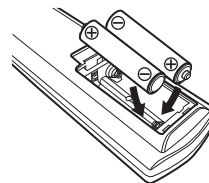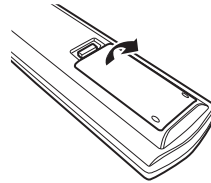


#### NOTE

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
  - Do not use a new battery together with an old one.
  - Do not use two different types of batteries.
  - Do not attempt to charge dry batteries.
  - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.

### Operating Range of the Remote Control Unit

Point the remote control unit at the remote sensor when operating it.

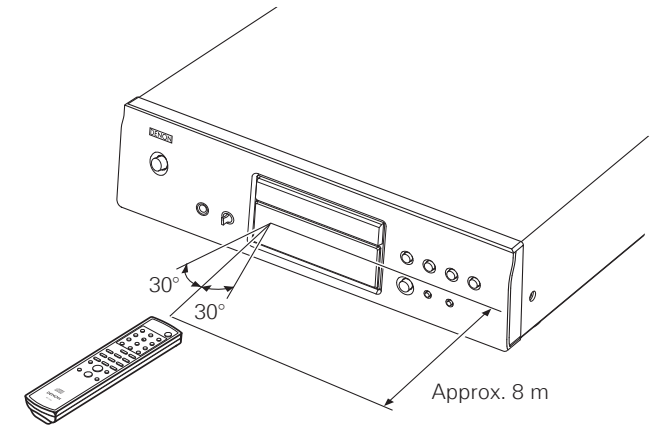


#### NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

# Part Names and Functions


For buttons not explained here, see the page indicated in parentheses ( ).

## Front Panel

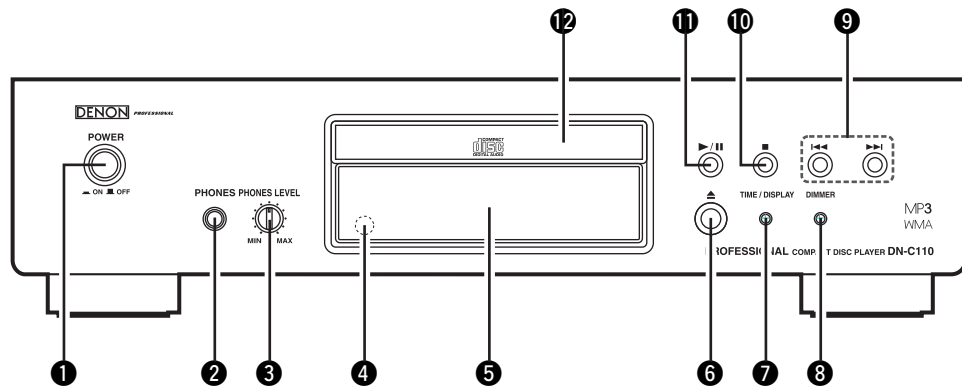


- 1 Power switch (ON OFF) ..... (7)
- 2 Headphones jack (PHONES) ..... (7)
- 3 PHONES LEVEL knob ..... (7)
- 4 Remote control sensor ..... (3)
- 5 Display
- 6 Disc tray open/close button (▲) ..... (7)
- 7 TIME/DISPLAY button ..... (8, 10)
- 8 DIMMER button ..... (7)
- 9 Revers-skip/Forward-skip buttons (◀▶) ..... (8, 10)
- 10 Stop button (■) ..... (8)
- 11 Play/Pause button (▶||) ..... (7 ~ 10)
- 12 Disc tray ..... (7)

## Rear Panel

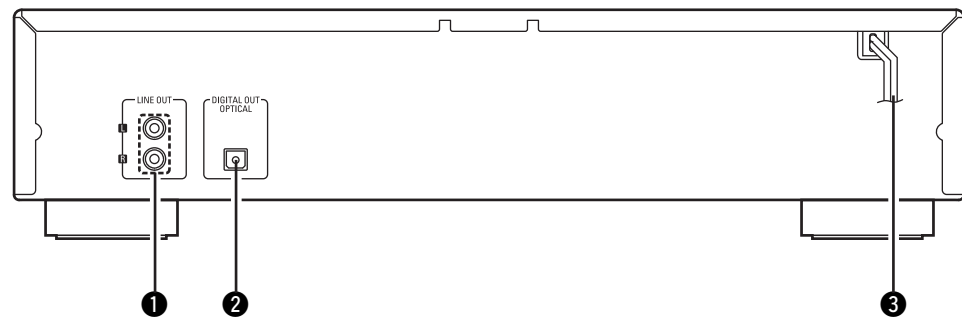

- 1 LINE OUT connectors ..... (6)
- 2 DIGITAL OUT OPTICAL connector ..... (6)
- 3 Power cord ..... (6)

## Display

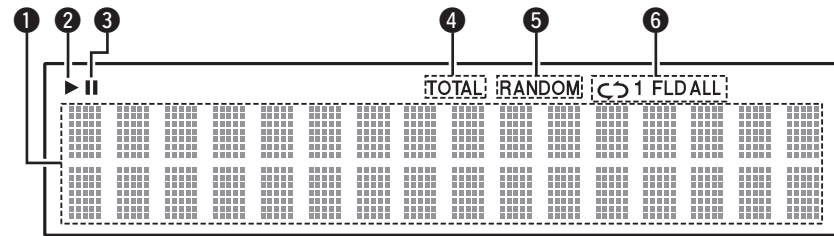

- 1 **Information display**  
Various information is displayed here, depending on the operation mode.
- 2 Lights when a disc is playing.
- 3 Lights when a disc is pausing.
- 4 **TOTAL indicator**  
Lights when the total number of tracks and total time of the CD are displayed.
- 5 Lights when in the random play mode.
- 6 Lights when in the repeat play mode.  
The display switches as follows each time the **REPEAT** button on the remote control unit is pressed.
  - In modes other than the folder mode:
 

↻ 1      ↻ ALL  
(1-track repeat)      (All-track repeat)


Not displayed
  - In the folder mode:
 

↻ 1 FLD      ↻ FLD  
(1-track repeat)      (All-track repeat between folders)

FLD



Remote Control Unit

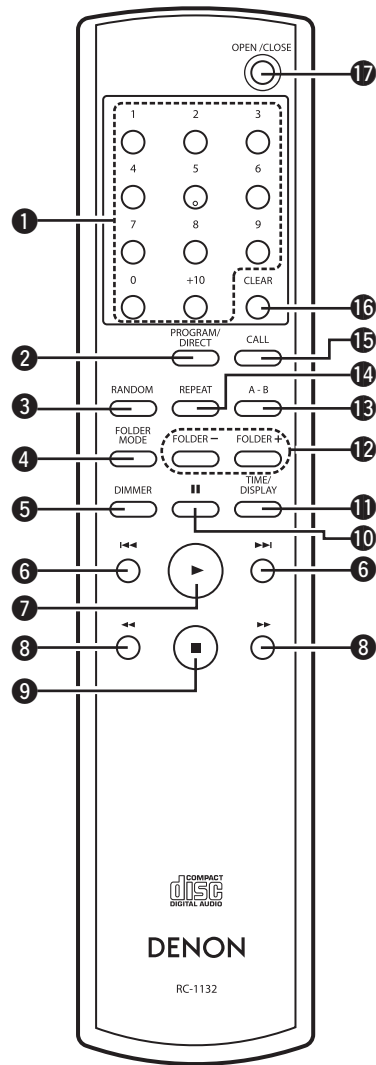

- ❶ Number buttons ..... (8, 10)
- ❷ PROGRAM/DIRECT button ..... (9)
- ❸ RANDOM button ..... (9)
- ❹ FOLDER MODE button ..... (10)
- ❺ DIMMER button ..... (7)
- ❻ Reverse-skip/Forward-skip buttons  
(⏮, ⏭) ..... (8, 10)
- ❼ Play button (▶) ..... (7 ~ 10)
- ❽ Fast-reversing/Fast-forwarding buttons  
(⏪, ⏩) ..... (8)
- ❾ Stop button (■) ..... (8)
- ❿ Pause button (⏸) ..... (7, 8)
- ⓫ TIME/DISPLAY button ..... (8, 10)
- ⓬ FOLDER +, - buttons ..... (10)
- ⓭ Repeat A-B button (A-B) ..... (8)
- ⓮ REPEAT button ..... (8, 10)
- ⓯ CALL button ..... (9)
- ⓰ CLEAR button ..... (9)
- ⓱ OPEN/CLOSE button ..... (7)



The skip buttons (⏮ and ⏭), +10 button and FOLDER +, - buttons operate continuously when held in.

Connections

Connections for all compatible audio signal formats are described in this owner's manual. Please select the types of connections suited for the equipment you are connecting.

NOTE

- Do not plug in the power cord until all connections have been completed.
- When making connections, also refer to the owner's manual of the other components.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Do not bundle power cords together with connection cables. Doing so can result in humming or noise.


Preparations

Cables Used for Connections


Select the cables according to the equipment being connected.

Audio cables	Signal direction
<p><b>Analog connections (stereo)</b></p> <p>(White) (L) (R)  (L) (R)</p> <p>(Red) (L) (R)  (L) (R)</p> <p>Audio cable (supplied)</p>	<p>Audio signal:</p> <p> Output Input</p>
<p><b>Optical digital connections</b></p> <p> Optical cable (sold separately)</p>	


## Analog Connections

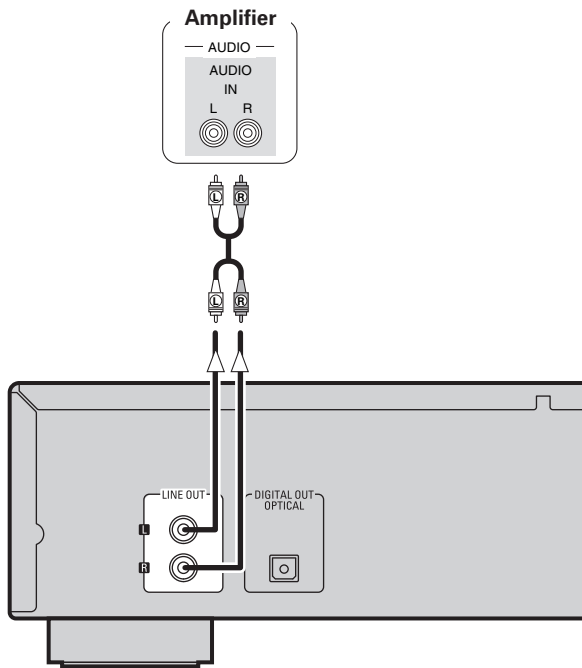

## Digital Connections

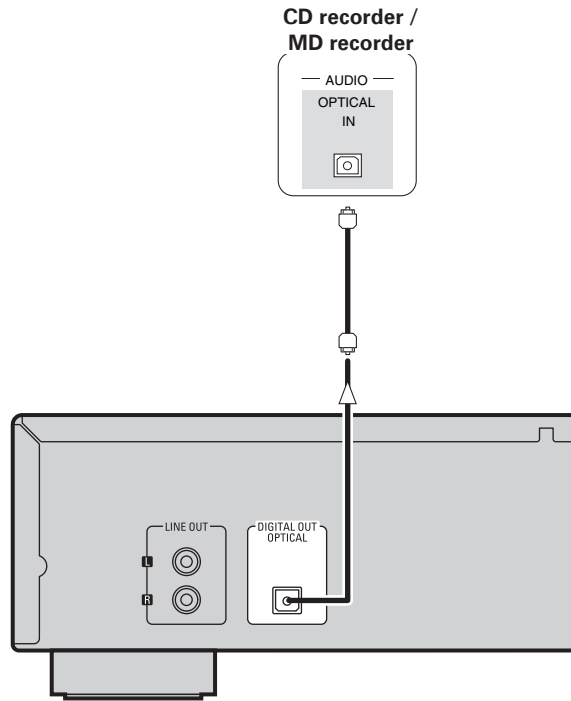


❑ When connecting the optical digital output connector with an optical transmission cable (sold separately)

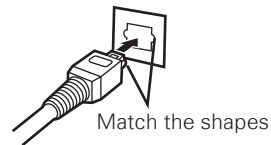

Match the shapes then insert firmly all the way in.

## Connecting the Power Cord

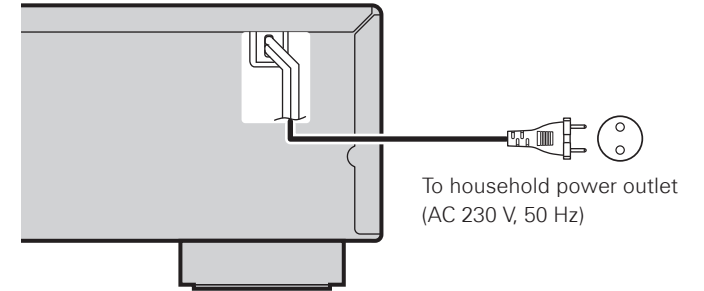

### NOTE

- Insert the plugs securely. Incomplete connections will result in the generation of noise.
- Do not unplug the power cord while the set is operating.



## Once Connections are Completed

**Turning the Power On** (👉 page 7)

# Playback

**Symbols used to indicate buttons in this manual**

- Button located on both the main unit and the remote control unit → **BUTTON**
- Button only on the main unit → **<BUTTON>**
- Button only on the remote control unit → **[BUTTON]**

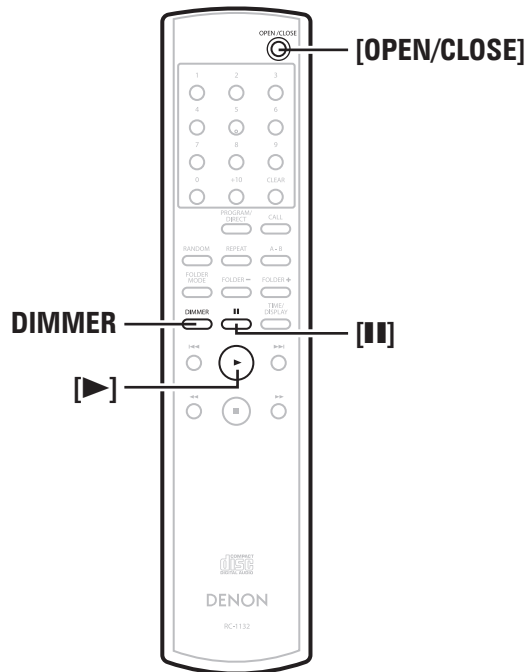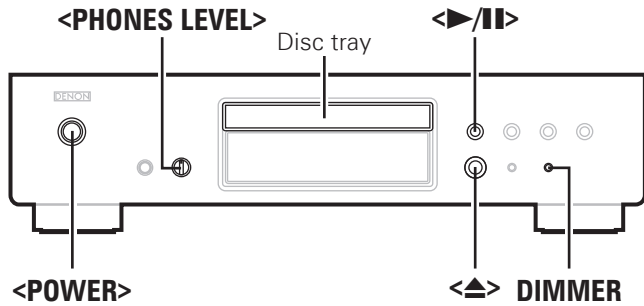

## Preparations

### Turning the Power On

- Press **<POWER>**.
- When a disc is loaded, playback starts automatically.
  - If no disc is loaded "NO DISC" is displayed.

- Turning the Power Off**  
Press **<POWER>** again.

- NOTE**
- Be sure to stop playback before turning the power off.
  - Make sure that the disc tray is completely shut before turning off the power.

### Loading Discs

- In the stop mode, press **<▲>** or **[OPEN/CLOSE]** to open the disc tray.
- ※ "Loading discs" (page 2).

- To close the disc tray**  
Press **<▲>** or **[OPEN/CLOSE]** again.
- ※ The disc tray also closes when **<▶/II>**, **[▶]** or **[II]** is pressed.

- NOTE**
- Do not place any foreign objects in the disc tray. Doing so could damage it.

## Operations Possible During Playback

### Switching the Display's Brightness

- Press **DIMMER**.
- Bright → Dim → Dark
- OFF ←
- ※ The display's brightness switches each time the button is pressed.



### Listening with Headphones

- Plug the headphones (sold separately) into the **PHONES** jack.
- Adjusting the Volume**  
Turn **<PHONES LEVEL>**.

- NOTE**
- Be careful not to set the volume too high when using headphones.

**Symbols used to indicate buttons in this manual**

Button located on both the main unit and the remote control unit → **BUTTON**  
 Button only on the main unit → **<BUTTON>**  
 Button only on the remote control unit → **[BUTTON]**

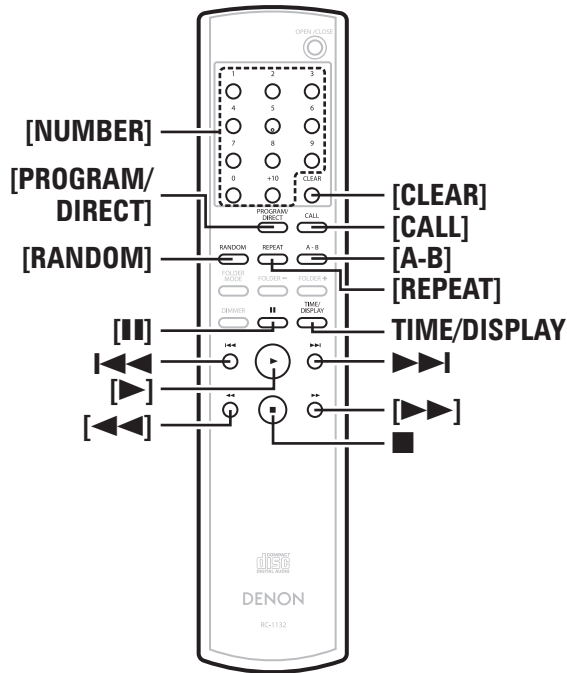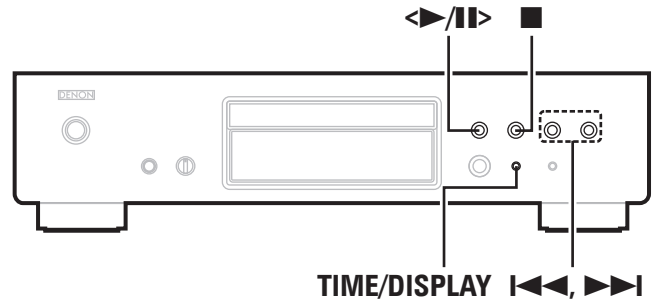

## CD Playback

### Playing CDs

Press **<▶/⏸>** or **[▶]**.  
 The "▶" indicator lights and playback begins.

- Stopping Playback**  
Press **■**.
- Stopping Playback Temporarily**  
Press **<▶/⏸>** or **[⏸]**.  
The "⏸" indicator lights.  
\* To resume playback, press **<▶/⏸>** or **[▶]**.
- Fast-Forwarding and Fast-Reversing (searching)**  
During playback, press and hold in **[◀◀, ▶▶]**.
- Moving to the Beginning of Tracks (skipping)**  
During playback, press **[◀◀, ▶▶]**.  
\* The disc is skipped the number of tracks equal to the number of times the button is pressed.  
\* When pressed once in the return direction, playback returns to the beginning of the currently playing track.
- To Play the Desired Track (Remote Control Unit Only)**  
Press **[NUMBER]** (0 ~ 9, +10) to select the track.  
**[Example]** : Track 4 : **[4]**  
**[Example]** : Track 12 : **[+10], [2]**  
**[Example]** : Track 20 : **[+10], [+10], [0]**

### Switching the Display

Press **TIME/DISPLAY**.

Elapsed time of currently playing track → Remaining time of currently playing track  
 Remaining time for all remaining tracks

\* The display switches each time the button is pressed.

### Playing Repeatedly <Repeat Playback>

Press **[REPEAT]**.  
 Playback in the respective repeat mode starts.

↻ 1 Single-track repeat → ↻ ALL All-track repeat  
 Repeat off (indicator turns off)

- [Selectable items]**
- ↻ 1 (Single-track repeat) : Only 1 track is played repeatedly.
  - ↻ ALL (All-track repeat) : All tracks are played repeatedly.
  - Repeat off (indicator turns off) : Normal playback resumes.

### Repeated playback of parts you want to play <A-B repeat play>

- 1** During playback, press **[A-B]** at the point at which you want to start repeating (point A).  
The "REPEAT A-" display flashes.
- 2** During playback, press **[A-B]** at the point at which you want to stop repeating (point B).  
The "REPEAT A-B" is displayed and the A-B section is played repeatedly.

- Stopping A-B repeat playback**  
Press **[A-B]**.
- A-B repeat playback is not possible during programmed playback or random playback.

## Playing Random Order <Random Playback>

- 1** In the stop mode, press **[RANDOM]**.  
The "RANDOM" indicator lights.

- 2** Press **<▶/II>** or **[▶]**.  
The tracks start playing in random order.

- Stopping Random Playback**  
In the stop mode, press **[RANDOM]**.  
The "RANDOM" indicator turns off.



When **[REPEAT]** is pressed during random playback, the tracks are played in a different random order after this turn.

### NOTE

Direct searching is not possible during random playback.

## Playing Tracks in the Desired Order <Program playback>

Up to 25 tracks can be programmed.

- 1** In the stop mode, press **[PROGRAM/DIRECT]**.  
"PGM" is displayed.

- 2** Use **[NUMBER]** (0 ~ 9, +10) to select the tracks.

**[Example]** To program tracks 3, 12, 7 to play in that order:  
Press **[PROGRAM/DIRECT]**, **[3]**, **[+10]**, **[2]**, **[7]**.

- 3** Press **<▶/II>** or **[▶]**.  
Playback starts in the programmed order.

- Checking the order of the programmed tracks**

In the stop mode, press **[CALL]**.

The track numbers are displayed in the programmed order each time the button is pressed.

- To clear the last track programmed**

In the stop mode, press **[CLEAR]**.

The last track programmed is cleared each time the button is pressed.

- To clear one programmed track at a time**

In the stop mode, press **[CALL]** to select the track to be cleared, then press **[CLEAR]**.

- Clearing the all programmed track**

In the stop mode, press **[PROGRAM/DIRECT]**.



- When **[REPEAT]** is pressed during program playback, the tracks are played repeatedly in the programmed order.
- When **[RANDOM]** is pressed during program playback, the programmed tracks are played in random order.

## Playback of MP3 and WMA Files

There are many music distribution sites on the Internet allowing you to download music files in MP3 or WMA (Windows Media® Audio) format. The music (files) downloaded from such sites can be stored on CD-R or CD-RW discs and played on the DN-C110.

"Windows Media" and "Windows" are registered trademarks or trademarks in the United States and other countries of Microsoft Corporation of the United States.

## About the MP3 and WMA Formats That Can be Played

CD-R and CD-RW discs created in the format described below can be played.

### Writing software format

ISO9660 level 1

※ When written in other formats, it may not be possible to play the disc properly.

### Maximum number of playable files and folders

Folder: 255

File: 255

### File format

MPEG-1 Audio Layer-3

WMA (Windows Media Audio)

### Tag data

ID3-Tag (Ver.1x)

META-Tag (Compatible with title, artist and album names)



Playable MP3/WMA file			
File format	Sampling frequency	Bit rate	Extension
MP3	32, 44.1, 48 kHz	32 ~ 320 kbps	.MP3
WMA	32, 44.1, 48 kHz	64 ~ 160 kbps	.WMA



- Be sure to give files the extension ".MP3" or ".WMA". Files with any other extensions or with no extensions cannot be played.
- Recordings you have made should only be used for your personal enjoyment, and as per copyright laws may not be used in other ways without permission of the copyright holder.

**Symbols used to indicate buttons in this manual**


Button located on both the main unit and the remote control unit → **BUTTON**  
 Button only on the main unit → **<BUTTON>**  
 Button only on the remote control unit → **[BUTTON]**

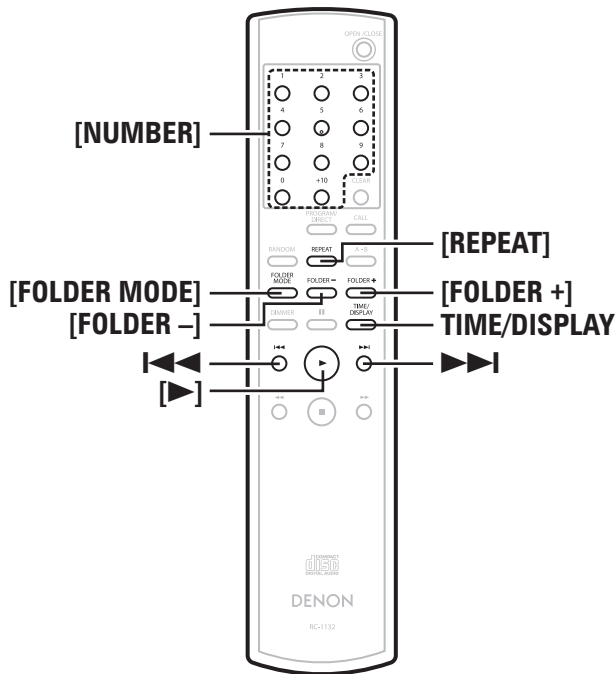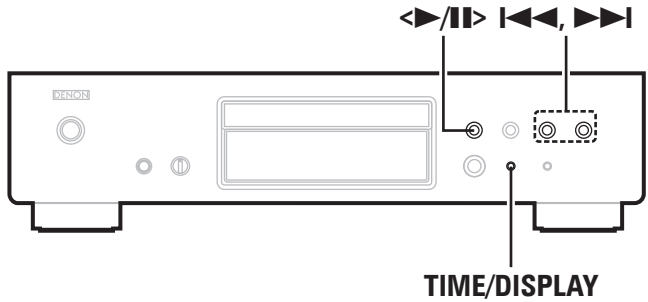

**Playing MP3 and WMA Files**

 
- 1** Load a CD-R or CD-RW disc containing music files in the MP3 or WMA format into the disc tray (👉 page 2).
- 2** Press **[FOLDER MODE]** and select “Folder Mode” or “Disc Mode”.  
 [About the display]  
 When “Folder Mode” is selected ..... “FLD” indicator lights.  
 When “Disc Mode” is selected ..... “FLD” indicator turns off.  
**Folder Mode :**  
 All the files in the selected folder are played.  
**Disc Mode :**  
 After the selected folder and files are played, all the files in all the folders are played.
- 3** Use **[FOLDER +, -]** to select the folder to be played.
- 4** Use **⏮, ⏭** to select the file to be played.
- 5** Press **⏪/⏩** or **▶**.

**To switch the Folder or File During Playback**

- **Folder**  
 Use **[FOLDER +, -]** to select the folder.
  - **File**  
 Use **⏮, ⏭** to select the file, or use **[NUMBER] (0 ~ 9, +10)** to select the file number.
- ※ The file numbers are set automatically when the disc is loaded.
-  Copyright-protected files cannot be played.  
 (The “Not Support” is displayed.)  
 Note that depending on the software used for burning and other conditions, some files may not play or display correctly.

**Switching the Display**

During playback, press **TIME/DISPLAY**.



※ The characters that can be displayed are as follows:

A ~ Z   a ~ z   0 ~ 9

! " # \$ % & ; : < > ? @ ¥ [ ] \_ ` { } ~ ^ ' ( ) \* + , - . / = (space)


**To Play Repeatedly**

 Press **[REPEAT]**.


Playback starts in the respective repeat mode.

※ The selectable repeat modes differ in the “Folder Mode” and the “Disc Mode”.

**When “Folder Mode” is selected:**



**When “Disc Mode” is selected:**

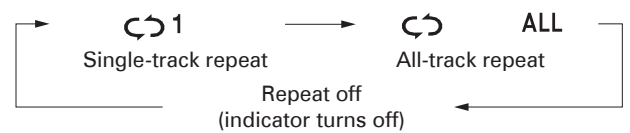

**[Selectable items]**

**When “Folder Mode” is selected:**


- ↻ 1 FLD** : Only the selected track is played repeatedly.
- ↻ FLD** : All the files in the selected folder are played repeatedly.
- FLD** : Folder mode playback resumes.

**When “Disc Mode” is selected:**

“Playing Repeatedly <Repeat playback>” (👉 page 8)


**Setting random playback**

“Playing Random Order <Random playback>” (👉 page 9)

 Programmed playback is not possible with MP3/WMA discs.

## Using the Timer Play Function

- 1** Turn on the power of the connected components.
- 2** Switch the amplifier's function to input from the connected main unit.
- 3** Load a disc in the player.
- 4** Set the audio timer for the desired times.  
 ※ Refer also to the owner's manual of the audio timer.
- 5** Turn the timer "ON".  
 The power of the components connected to the timer turns off.  
 ※ When the set time is reached, the power of the different components automatically turns on and playback starts from the first track.

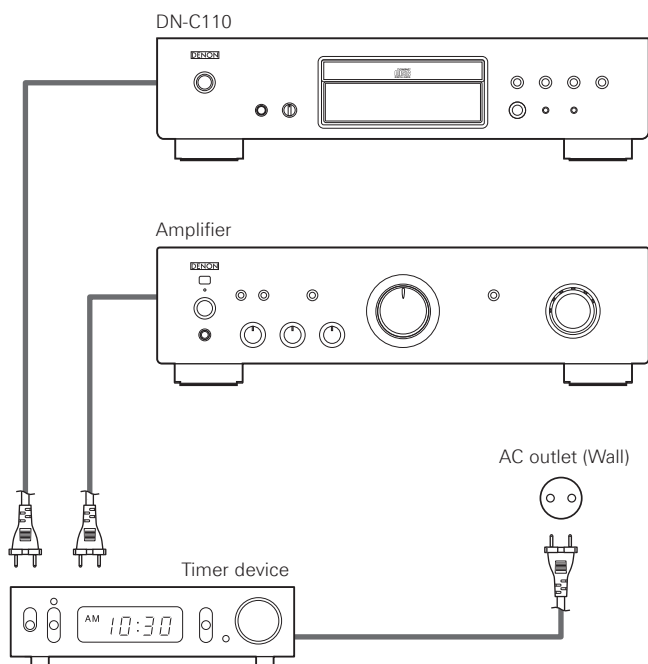

## Troubleshooting

If a problem should arise, first check the following:

1. Are the connections correct?
2. Is the set being operated as described in the owner's manual?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction. In this case, disconnect the power immediately and contact your store of purchase.

Symptom	Cause	Countermeasure	Page
Disc tray does not open.	• The power is not on.	• Turn on the power.	7
"NO DISC" is displayed even though a disc is loaded.	• The disc is not properly loaded.	• Reload the disc.	2, 3
"00 Tr 00 : 00" is displayed even though a disc is loaded.	• The loaded disc is not a CD.	• Load a CD.	2
Playback does not start even when the ►/   button on the main unit or the ► button on the remote control unit is pressed.	• The disc is dirty or scratched.	• Wipe the dirt off the disc or replace the disc.	3
No sound is produced or sound is distorted.	• The output cables are not properly connected to the amplifier. • The amplifier's function setting or adjustments are not right.	• Check the connections. • Check the amplifier's function and controls and adjust as necessary.	6 -
No digital signals are output.	• The connection cables are not properly connected.	• Check the connections.	6
Specific section of the disc cannot be played properly.	• The disc is dirty or scratched.	• Wipe the dirt off the disc or replace the disc.	3
Programmed playback is not possible.	• The tracks have not been programmed properly. • Programmed playback is not possible with MP3 and WMA files.	• Program properly. • Use a CD.	9 9
A CD-R or CD-RW disc cannot be played.	• The disc has not been finalized. • The recording conditions are bad or the quality of the disc itself is poor.	• Finalize the disc then play it. • Use a properly recorded disc.	2 2
Set does not operate properly when remote control unit is operated.	• The batteries are spent. • The remote control unit is too far from the set.	• Replace the batteries with new ones. • Move the remote control unit closer to the set.	3 3
"Not Support" is displayed when playing files recorded in MP3 or WMA format.	• You have selected a copyright-protected WMA file or a file that cannot be played normally.	• Use the ◀◀ or ▶▶ button to select a different file.	10



# Specifications

## Audio performance

### Analog output

<b>Channels:</b>	2 channels
<b>Playable frequency range:</b>	2 Hz ~ 20 kHz
<b>S/N:</b>	105 dB
<b>Dynamic range:</b>	98 dB
<b>Harmonic distortion:</b>	0.003 % (1 kHz)
<b>Wow &amp; flutter:</b>	Below measurable limits
<b>Output level:</b>	2.0 V (10 kΩ/kohms)
<b>Signal type:</b>	16-bit linear PCM
<b>Sampling frequency:</b>	44.1 kHz
<b>Usable discs:</b>	Compact Disc
<b>Digital output</b>	
<b>Optical:</b>	-15 ~ -21 dBm
<b>Emission wavelength:</b>	660 nm

## General

<b>Power supply:</b>	AC 230 V, 50 Hz
<b>Power consumption:</b>	13 W
<b>Maximum external dimensions:</b>	434 (W) x 107 (H) x 279 (D) mm
<b>Weight:</b>	4.0 kg

## Remote control unit (RC-1132)

<b>Power supply:</b>	R03/AAA Type (two batteries)
<b>Maximum external dimensions:</b>	49 (W) x 220 (H) x 21 (D) mm
<b>Weight:</b>	106 g (including batteries)

※ For purposes of improvement, specifications and design are subject to change without notice.

# Index

## A

A-B repeat play	8
All-track repeat	8
Analog Connections	6
Audio cable	5

## B

Batteries	3
-----------	---

## C

Cables Used for Connections	5
CD-R/CD-RW	2

## D

Digital Connections	6
Disc Mode	10
Display	4
Display's Brightness	7

## E

Extension	9
-----------	---

## F

Fast-Forwarding	8
Fast-Reversing	8
File format	9
Folder	10
Folder Mode	10

## H

Headphones	7
------------	---

## M

Moving to the Beginning of Tracks	8
MP3	10
Music CDs	2

## O

Optical cable	5
---------------	---

## P

Playing CDs	8
Playing Random Order	9
Playing Repeatedly	8
Playing Tracks in the Desired Order	9
Power Cord	6
Program playback	9

## R

Random Playback	9
Repeat Playback	8

## S

Searching	8
Single-track repeat	8
Skipping	8
Stopping Playback	8
Stopping Playback Temporarily	8

## T

Timer Play Function	11
---------------------	----

## W

WMA	10
-----	----

# D&M Holdings Inc.

TOKYO, JAPAN  
[www.denon.com](http://www.denon.com)

Professional Business Company, D&M Holdings Inc.  
Printed in China 5411 10310 006D