



TECHNICAL DATA SHEET

CANFORD COMPACT POWER AMPLIFIER

20-319 MOUNTING BRACKETS

APPLICATION

These fitting instructions are to be used for the mounting of the following Canford Compact Power Amplifiers:


- 20-311 Line input, electronically balanced
- 20-312 Line input, transformer balanced
- 20-313 Mic. Input, electronically balanced

CONTENTS

- 2 off Mounting brackets
- 6 off No.10 Wood screw
- 6 off M5 plain washer

FITTING INSTRUCTIONS

Decide where the amplifier is to be located. Ensure that the controls and connectors will be within reach and not obstructed once the amplifier is mounted. Using a 3mm bit, drill 6 pilot holes in the desired location, as shown in the drawing below. Fix one of the mounting brackets to the surface using three of the No. 10 wood screws and washers. Once this is secure offer up the amplifier, ensuring that the bracket mates with the groove in the side of the unit. Place the other bracket in position and fix to surface using the remaining screws and washers. This completes the fitting of the brackets. All wiring can now be connected to the amplifier.

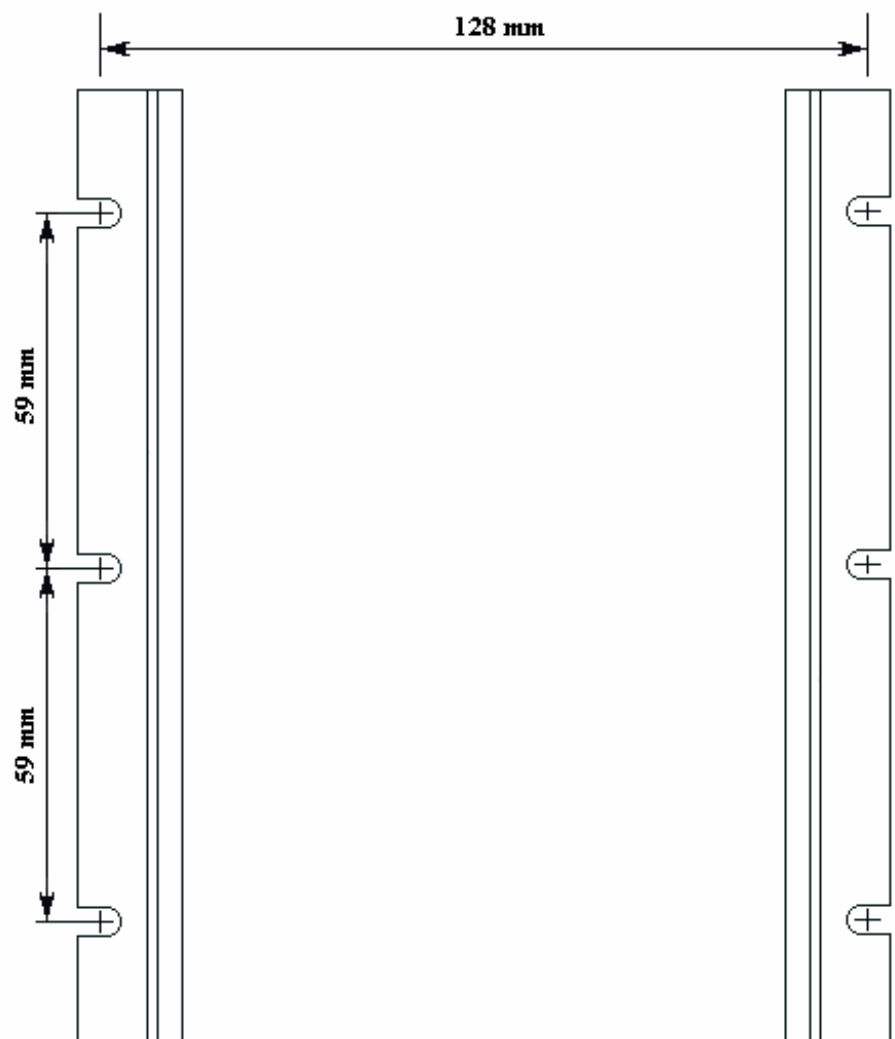

Note: drawing is NOT shown full size.