

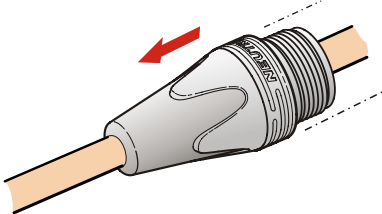
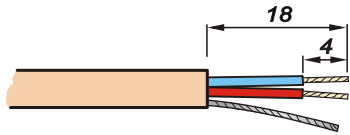
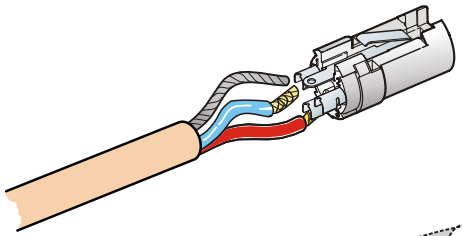
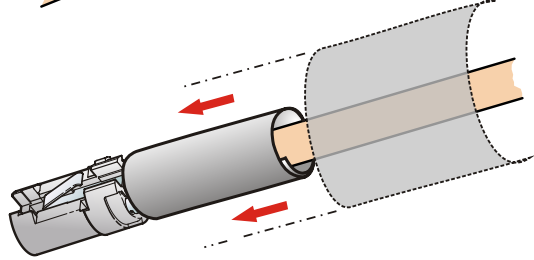
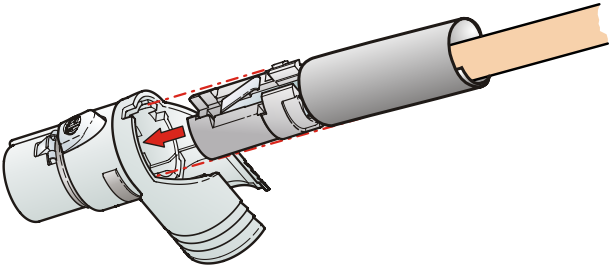
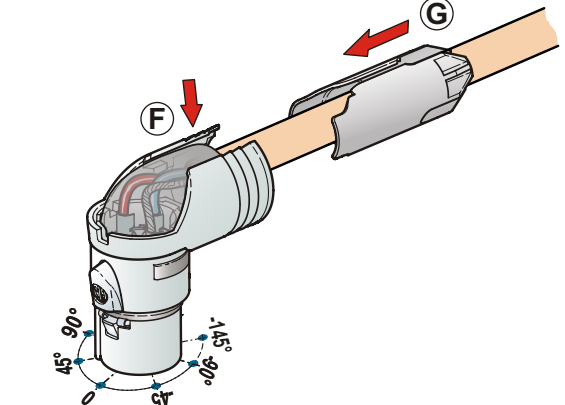


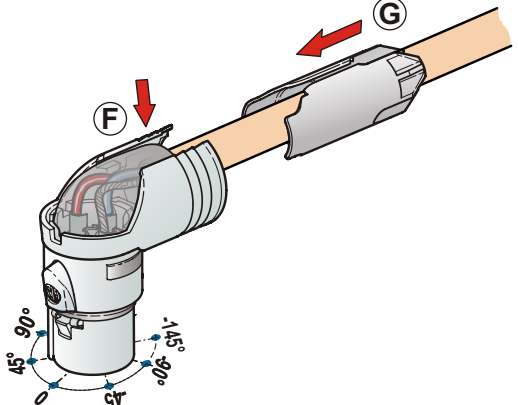

# ASSEMBLY INSTRUCTION

## NC\*FRX & NC\*MRX | XLR Cable Connector

- A** Slide the boot onto the cable.
- B** Prepare cable as shown.
- C** Insert wires into the terminals and solder them.
- D** Position the sleeve over the cables.
- E** Slide insert into the housing until it snaps in.  
**Align insert with housing.**
- F** Position the cable.
- G** Slide the chuck into the housing.  
**Pay attention to position chuck as shown.**
- 
- 
- 
- 
- 
- 
- 
- 90°  
45°  
0°  
45°  
90°  
145°  
30°

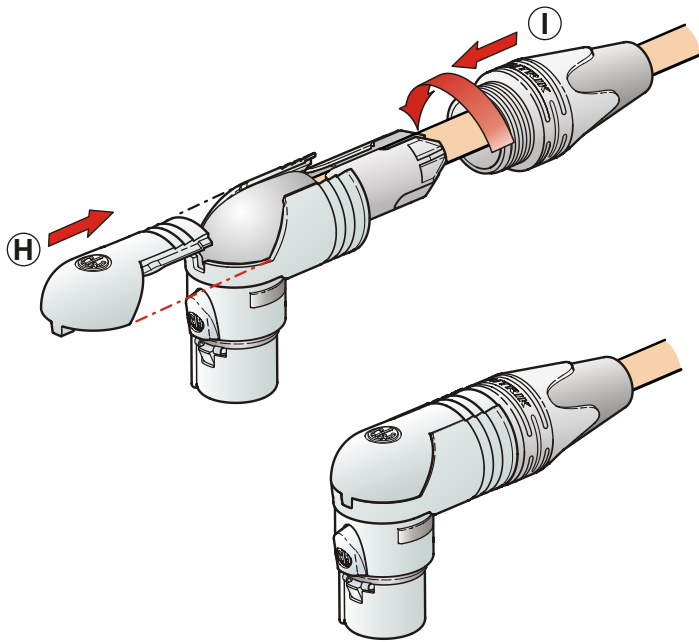


**H** Position the cover.

Before placing the cover choose the orientation of cable outlet by turning housing.

**I** Finish the assembly by turning the bushing onto the connector.

### Disassembly of the insert

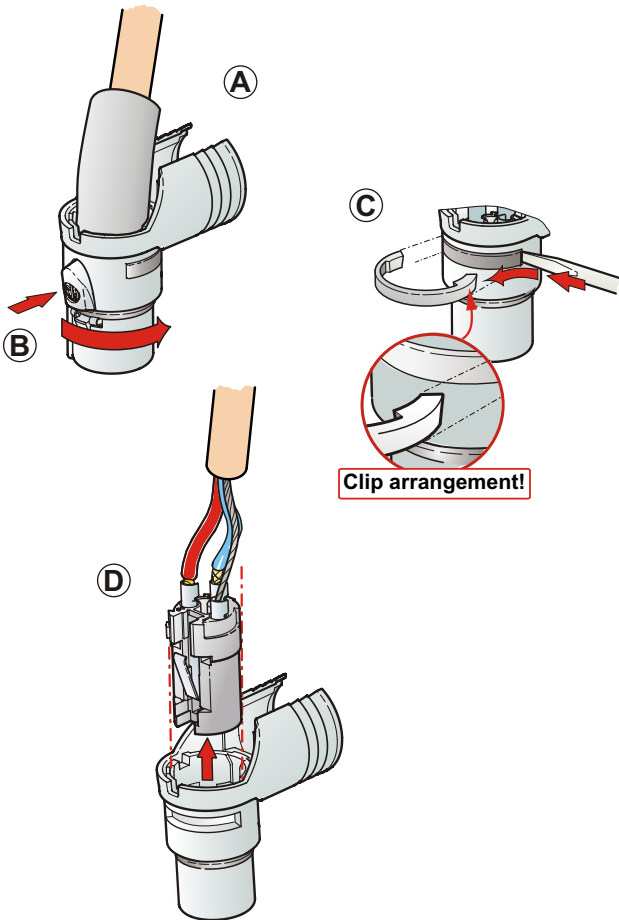

**A** Remove cover and chuck.

**B** Push latch and turn housing approx. a half turn until housing can be separated.

**C** Lift the locking clip by help of a screw driver.

**D** Remove insert.